

Thank you for purchasing DroneMobile by CompuStar. Please complete the information on the front and ba	ıck
of this card and visit www.dronemobile.com to register/activate your system and download your DroneMobi	le
smartphone app.	

DR-1000 hardware carries a 1 year manufacturer's warranty. You must register online at www.dronemobile.com/

Basic Plan

Premium Plan

,	at some features listed below may not be available. DroneMobile may requir		ls
additional parts ar	nd labor as well as upgrading to the Premium Plan before certain features can be activate iption Feature A		ited No
Lock	This feature locks and/or arms your vehicle. Your vehicle must be equipped with power locks. DroneMobile confirmation window will open if the option is selected. The button will confirm when the lock icon turns green.	_	
Unlock	This feature unlocks and/or disarms your vehicle. Your vehicle must be equipped with power locks. DroneMobile confirmation window will open if the option is selected. The feature confirms when the unlock icon turns green.		
INGINE STÄRT STOP	This button activates the start command of your DroneMobile system. If start installed, the vehicle will start and run for the set time. When you tap this button again your vehicle will shut off (Must wait at least 1 minute).		
Siren	This button activates the panic and/or lights flash action of your DroneMobile. This function requires additional parts and labor.		
Trunk	This button activates the trunk pop on your vehicle. This function requires additional parts and labor.		
	y 1: Feature Auxiliary functions can operate many different features on your vehicle from power sliding doors to power window roll-up and down.		

	mobil	Quick Start Card Basic Plan Premium Plan
		543/4 TIALIT 110/11/3/11 TIALIT
Drone App	OroneMobile App Icon	Click on this icon to open DroneMobile. When the app loads the Home screen will remain dim until it connects to your vehicle. Once connected you can begin using all the features of DroneMobile. Important: Not all features on DroneMobile are available. Please check with your place of purchase for details and/or installation costs.
Home	Home Icon	The Home Icon houses the main DroneMobile control screen. Here you can find your Lock, Unlock, Start/Stop, Trunk Pop, Panic, Aux 1, and Aux 2 buttons. When you tap a button it will dim. Once your phone receives confirmation of that feature the icon will turn green
Alerts	Alerts Icon	Click on this icon to bring up your Alerts screen. This screen will show all alerts you have set on your phone from speed violations to any and all alarm triggers from your system.
Map	Map Icon	The Map Icon opens the GPS Tracking portion of DroneMobile. Here you can view your vehicle from a map showing the approximate address its located at. You can have DroneMobile plot directions from your phone to your vehicle and can view stats such as vehicle temperature. This feature is not included in the standard plan. You have to upgrade to the Premium Plan for this feature.
Settings	Settings Icon	Click on the Settings Icon to customize your DroneMobile system. Here you can change your login password, adjust Notification Settings, select different vehicles, and change your Preference Settings.
Registrati	ion Informati	ion
		nation below and place the ID Sticker in the box to the right. The ID sticker is located on the DR-1000 Module. All of the information your registration on www.dronemobile.com. Welcome to the World of DroneMobile.
First Nam	ne:	Address:

Last Name: _____ City|State|Zip: **Place ID Sticker Here**

Phone Number: _____ Province: _____

Email Address: Country:

*Sticker is located on DR-1000

module